

SAMMY GAME CARTRIDGE SYSTEM

# **FASTER THAN SPEED™**

## **OPERATION MANUAL**

**25" UPRIGHT & 27" SITDOWN  
DEDICATED CABINET  
VIDEO GAME**



**Sammy USA Corporation**

901 CAMBRIDGE DRIVE  
ELK GROVE VILLAGE, IL 60007  
TEL: (847) 364-9787 FAX: (847) 364-9831  
TOLL FREE: 1-888-US-SAMMY  
WWW.SAMMYUSA.COM

Part#: 78-30-300

# CONTENTS

<b>1.</b>	<b>SPECIFICATIONS OF CABINET.....</b>	<b>2 to 6</b>
<b>2.</b>	<b>GAME PLAY.....</b>	<b>7 to 8</b>
<b>3.</b>	<b>GAME SETTING.....</b>	<b>9</b>
<b>4.</b>	<b>I/O TEST (CALIBRATION OF STEERING &amp; PEDALS).....</b>	<b>10</b>
<b>5.</b>	<b>SYSTEM BOARD .....</b>	<b>11 to 15</b>
	EXPANSION CARTRIDGE SLOT 1 .....	11
	JAMMA CONNECTOR TABLE .....	12
	SPEAKER VOLUME (SOUND) .....	13
	MODEM CONNECTOR (SRL) >>> OPTION .....	13
	DIP SWITCH (2 POSITIONS) .....	13
	STEREO SPEAKER OUTPUT CONNECTOR >>> OPTION .....	14
	VGA (31KHz) TV SIGNAL OUTPUT CONNECTOR (VDO) >>> OPTION ...	14
	GAME CARTRIDGE .....	15
<b>6.</b>	<b>SYSTEM MENU .....</b>	<b>16 to 22</b>
	TEST MODE .....	17, 18
	COIN SETTING .....	19, 20
	CONFIGURATION .....	21
	BOOKKEEPING .....	22
	BACKUP CLEAR .....	23
<b>7.</b>	<b>LINK CABLE (OPTION) &amp; SETTINGS .....</b>	<b>24, 25</b>
	25" UPRIGHT, BENCH SEAT INSTALLATION .....	26
	25" UPRIGHT, STEERING CONTROL PANEL INSTALLATION ..	27
	WIRING DIAGRAM FOR ATOMISWAVE GAME CABINET	
	WIRING DIAGRAM FOR DRIVING GAME CONTROL	

# 1. SPECIFICATIONS OF CABINET

## 25" UPRIGHT CABINET WITH BENCH

INPUT POWER: USA&CANADA = 120VAC, 60Hz

SIZE: W = 30" (762 mm)

WEIGHT: 360 lbs (164 kg)


D = 62" (1575 mm)

H = 77" (1956 mm)







## INSIDE VIEW OF CONTROL PANEL & INSTRUCTION PANEL

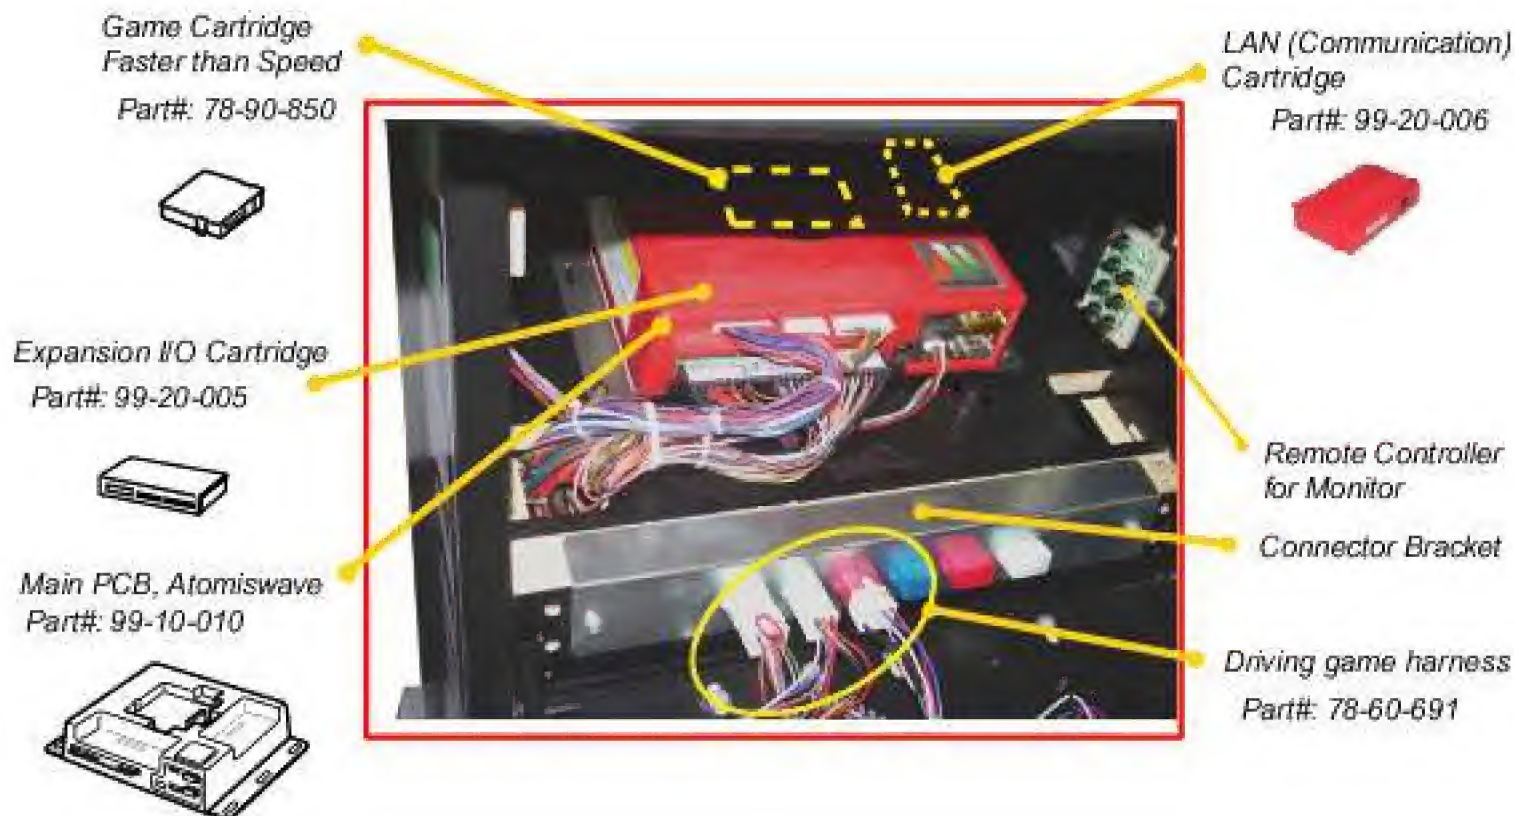


## STEERING WHEEL ASSY

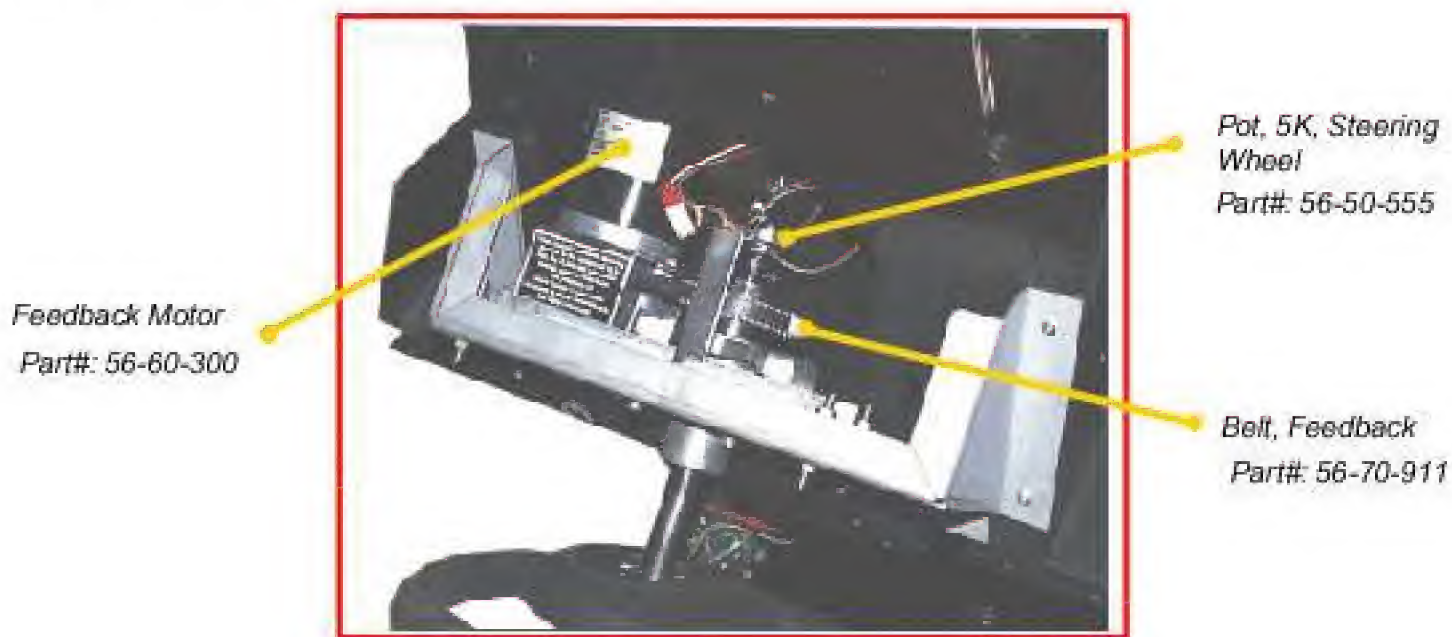

## INSIDE VIEW OF BACK DOOR (UPRIGHT)

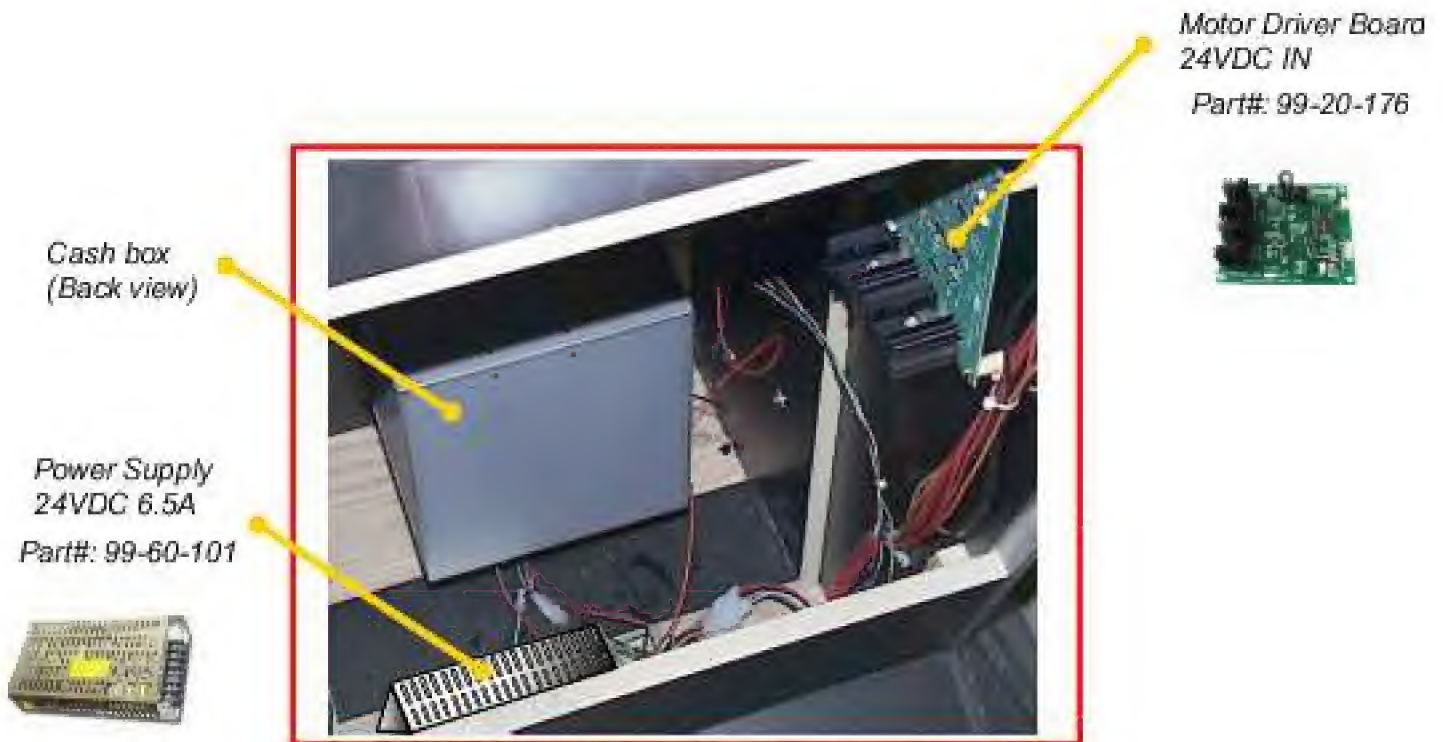

## INSIDE VIEW OF COIN DOOR (UPRIGHT)

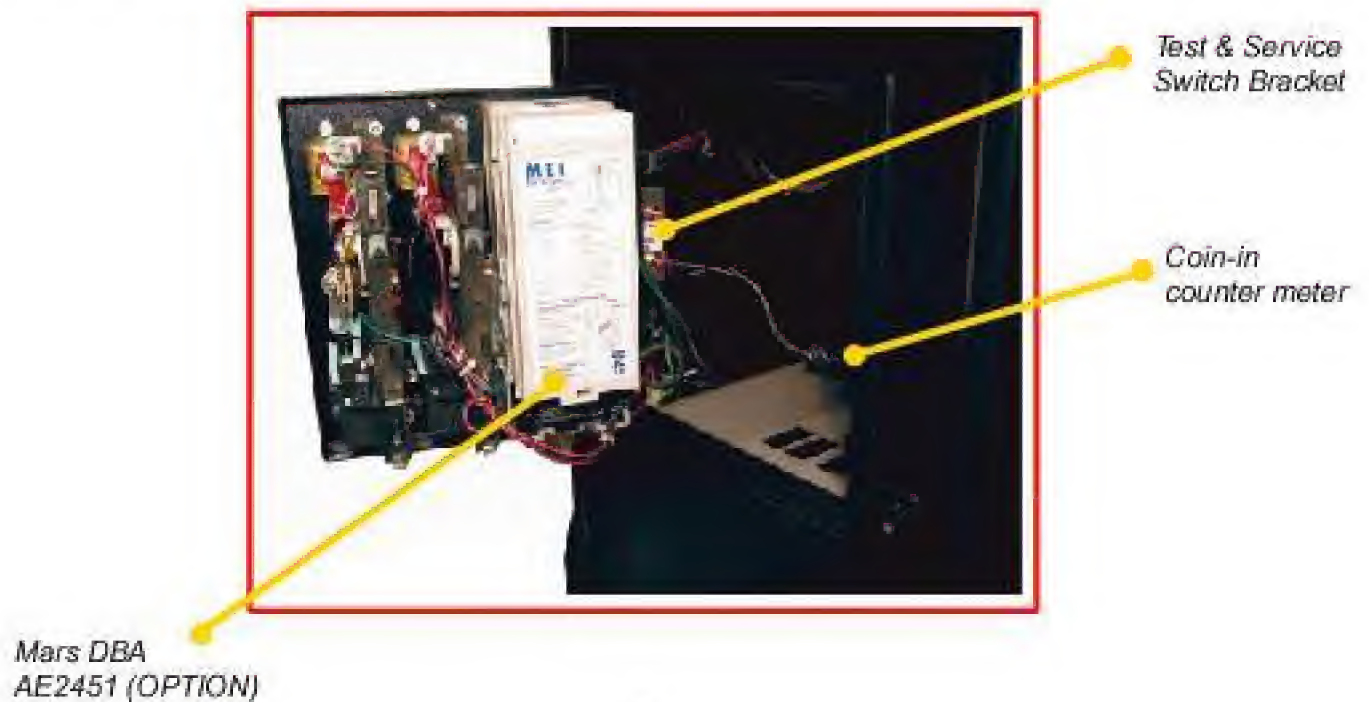



## 27" SITDOWN CABINET

**INPUT POWER: USA&CANADA = 120VAC, 60Hz**

**SIZE: W = 30" (762 mm)**

**D = 64" (1626 mm)**

**H = 78" (1980 mm)**

**WEIGHT: 460 lbs (209 kg)**




## INSIDE VIEW OF BACK DOOR (SITDOWN)


LAN cable (Option)

New Driving harness set  
Part#: 78-60-691

Motor Driver Board  
24VDC IN  
Part#: 99-20-176

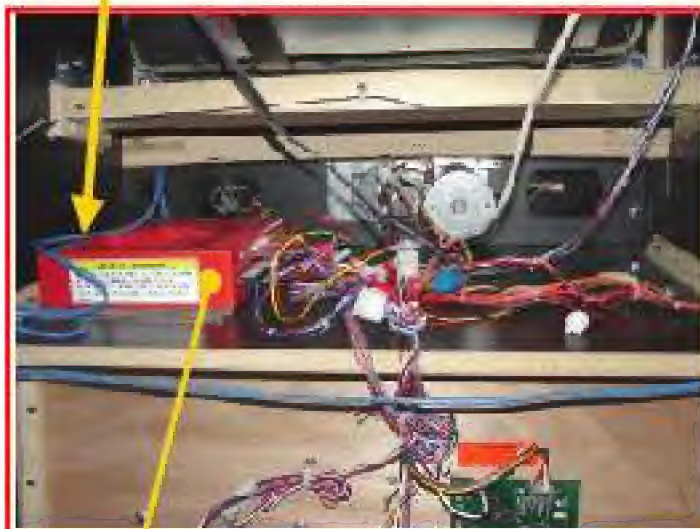

Main PCB, Atomiswave  
Part#: 99-10-010

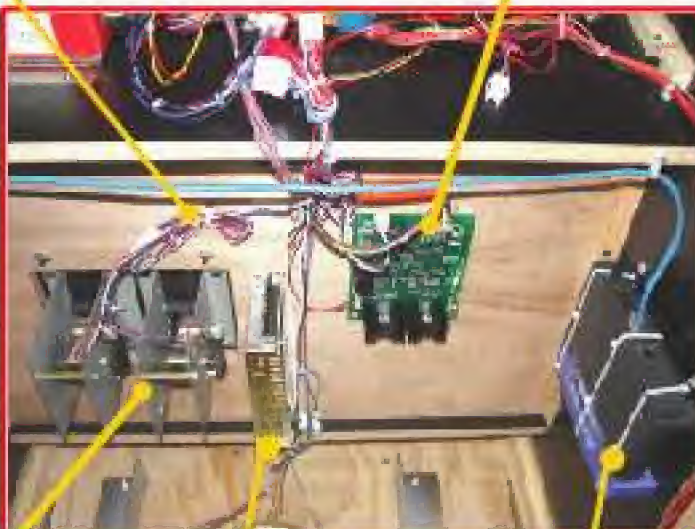

Dual Pedal Assy, Sitdown  
Part#: 56-50-651


Power Supply, AW MS  
Part#: 56-60-100

Router (Option)  
\* Use for 2 game link.

## INSIDE VIEW OF COIN DOOR (SITDOWN)


Remote Controller  
for Monitor

Test & Service  
Switch Bracket

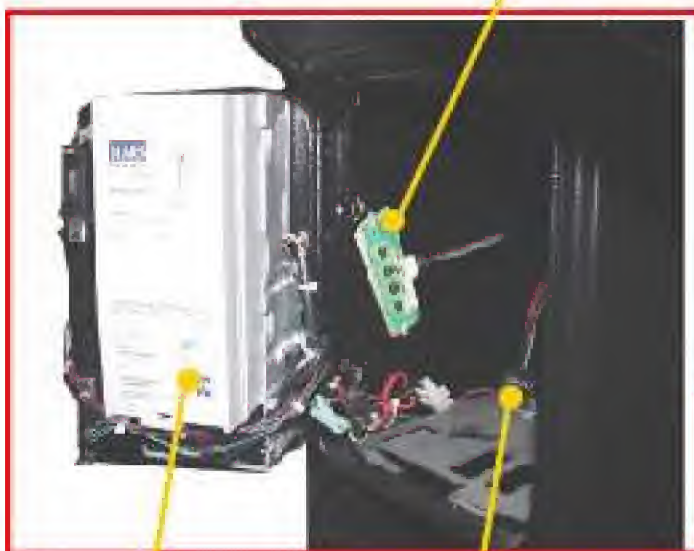

Mars DBA  
AE2451 (OPTION)

Coin-in  
counter meter

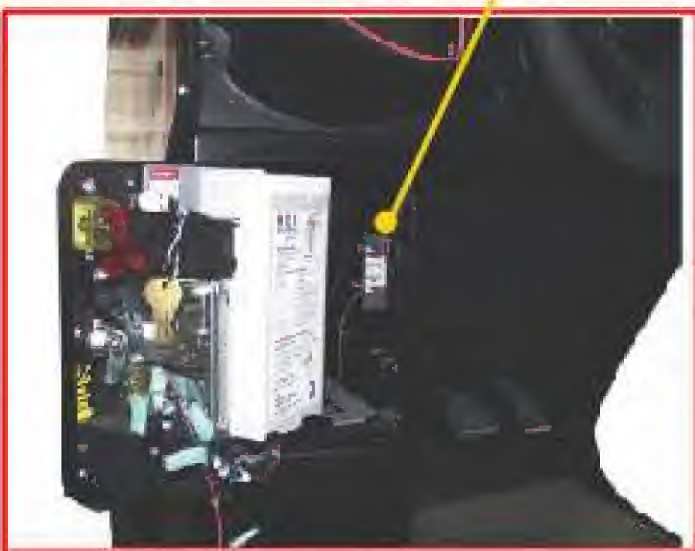



## 2. GAME PLAY

*FASTER THAN SPEED game is a Head-to-Head Competition Driving game with Street Racing cars.*

*There are GREAT skill factors that you will need to win a race! Play more to find out many of these features.*

*(NITRO BOOST, ROCKET START, 180 TURN, DRIFT THRU TURN, QUICK SHIFT, HIDDEN CARS, SEMI-AUTO SHIFT...and more-)*

### FEATURES:

- Each area has 2 races. If you win the 1st race, you will receive a hidden car.
- Enter your initials when your Lap time is in the Top 8.

### SINGLE PLAY (Refer to page 9 for Settings)

Single cabinet play. No link. Player races against CPU car.

1) Select **COURSE**. 6 areas as below.

**BEGINNER (SUNNYWOOD):** Difficulty Level = EASIEST

**NOVICE (METRO CITY):** Difficulty Level = EASY

**ADVANCED (NEON HILLS):** Difficulty Level = NORMAL

**EXPERT (WALL PARK):** Difficulty Level = NORMAL

**PRO (SOUTH BEACH):** Difficulty Level = HARD

**ACE (PACIFIC BAY):** Difficulty Level = HARDER

2) Use steering wheel to select from 8 kinds of cars. Shift up and down to select from 6 colors for car. Use gas pedal for final selection of both car and color.

### ALTERNATE PLAY: RACE FOR TIME (Refer to page 9 for Settings)

Single cabinet play. No link. Player races with CPU car or 2 to 4 player Alternate play. (You need to set up **GAME MODE** to **ALTERNATE PLAY** in **GAME SETTING** mode. Refer page 9)

Insert coins and screen shows **SINGLE PLAY** or **ALTERNATE PLAY** that needs more credits. Move Shift up/down to select but you can not select if there is not enough credits in.

You will score points by **RACE LAP TIME** and **TECHNIQUES** during the race.

(Boost with jump, Drift thru turn, Rocket start...etc.)

Score high to Rank in top 8 then enter your initials!


### LINK PLAY (Refer to page 9 for Settings)

#### 2 cabinets link play. 2 PLAYER COMPETITION!!!

1) Screen shows "STAND ALONE" OR "HEAD 2 HEAD."

NOTE: Opponents can not join from other cabinet, if you select **STAND ALONE**.

2) Select **COURSE**. (Only challenger is able to select **COURSE**.)

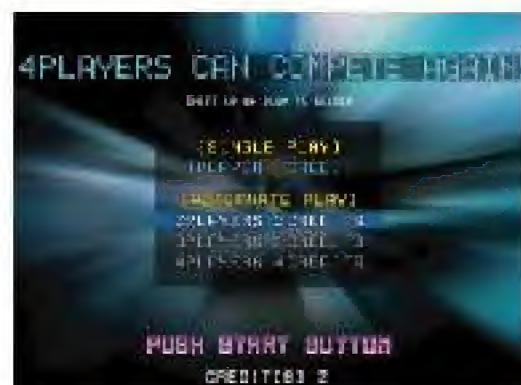



## GAME SCREEN



① **BACK MIRROR**

*Check opponents car by using back mirror!*

② **ELAPSED TIME**

*Display your current TIME.*

③ **N2O GAUGE**

*Display availability of N2O boost.*

④ **TIME LIMIT**

*Displays remaining time.*

⑤ **NAVIGATION MAP**

*Displays both cars' current position.*

⑥ **SPEEDOMETER**

### 3. GAME SETTING

*FASTER THAN SPEED* has the following settings. Press **TEST** switch to display **SYSTEM MENU** screen. Select **CONFIGURATION** and next select **GAME SETTING**. You can adjust the following game settings:

#### ■ GAME MODE

3 kinds. (**LINKED RACE**, **SINGLE RACE** or **ALTERNATE RACE**)  
Default is **SINGLE RACE**.

#### ■ GAME DIFFICULTY

5 kinds. (**EASIEST**, **EASY**, **NORMAL**, **HARD** or **HARDEST**) Default is **EASY**.

#### ■ BOOST TYPE

Number of times that player can use Boost during game.  
3 kinds. (**LEVEL 1** = 2 times; **LEVEL 2** = 3 times; or **UNLIMITED**)  
Default is **LEVEL 2**.

#### ■ STAGE TYPE

2 kinds. (**PRE-SET** = 1 and 2 stages,  
**SELECTABLE** = You can select 2nd stage from other area.) Default is **PRE-SET**.

#### ■ CAR SELECTED

6 kinds. (**TIME RELEASE**, 8, 9, 10, 11 or **ALL**) Default is **TIME RELEASE**.

**TIME RELEASE** = 8 cars first, one additional car will be added each week up to 12.  
8,9,10,11 = Number of cars that will appear from beginning. No time release.  
**ALL** = All 12 cars appear from beginning. No time release.

#### ■ RIVAL CAR

2 kinds. (**RANDOM** or **PRE-SET** = Same opponents car by each area and stage) Default is **PRE-SET**.

#### ■ VS BOOSTER

2 kinds. (**ON** or **OFF**) When 2 games in **LINK** mode, 2nd Place **CAR** will catch up faster. Default is **ON**.

#### ■ NAVIGATION MAP

2 kinds. (**ON** or **OFF**) Display **NAVIGATION MAP** on left bottom of screen. Default is **ON**.

#### ■ SPEEDOMETER

2 kinds. (**MPH** or **KMH**) Default is **MPH**.



### COIN SETTING:

**FACTORY DEFAULTS for FASTER THAN SPEED (NORTH AMERICAN VERSION)**

GAME MODE: **NORMAL**

COIN CHUTE TYPE: **COMMON**

PLAYER MODE: **2 PLAYERS**

COIN CHUTE #A: **3 COINS 1 CREDIT, 2 COINS CONTINUE**

COIN CHUTE #B: **3 COINS 1 CREDIT, 2 COINS CONTINUE**

PRESET SITUATION: **NORMAL**

#### NOTE:

**During LINK mode (2 games linked), please set up both games to same GAME SETTINGS except LINK ID.**




## 4. I/O TEST (CALIBRATION OF STEERING & PEDALS)

For Steering Wheel & Pedal calibration and other switch function tests, go to **TEST MENU** and select **I/O TEST**.

### I/O STATUS

You can test **START**, **BOOST** buttons and **Shift Assy** and, other switch devices during this mode. Using the **Shift lever** displays **HIGH** or **LOW** on screen. Press **START**, **BOOST** buttons to display **ON** on screen. Test other switches (**Coin A**, **B**, **Service**, **Test**) in this screen by manually pressing to display **ON**.

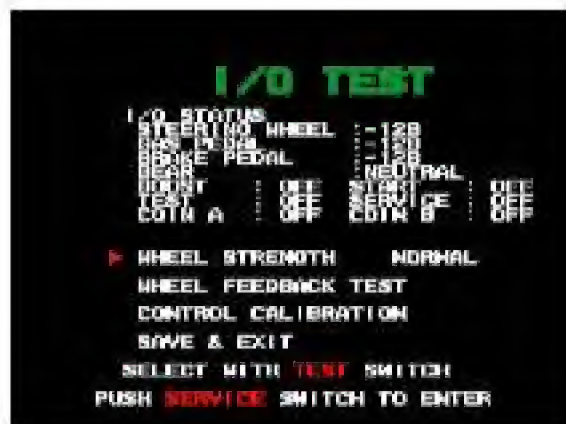

### WHEEL STRENGTH

You can set up strength of Steering Wheel Feedback during this setting. Choose from 4 kinds. (**OFF**, **LIGHT**, **NORMAL** and **HEAVY**)  
Default = **NORMAL**

### WHEEL FEEDBACK TEST

You can test Feedback strength during this mode. Please center the wheel before going into this mode.



### CONTROL CALIBRATION

You can adjust the calibration of Steering wheel and pedals during this mode. Please center the wheel before going into this mode.


- ① Turn Steering wheel to Left stop and Right stop.
- ② Press Accelerator pedal down to stop.
- ③ Press Brake pedal down to stop.
- ④ Press **START** button to complete the calibration.



## 5. SYSTEM BOARD

**DIMENSIONS:** 10 2/3" (W) x 9" (D) x 2 1/2" (H)

**WEIGHT:** 3 lbs

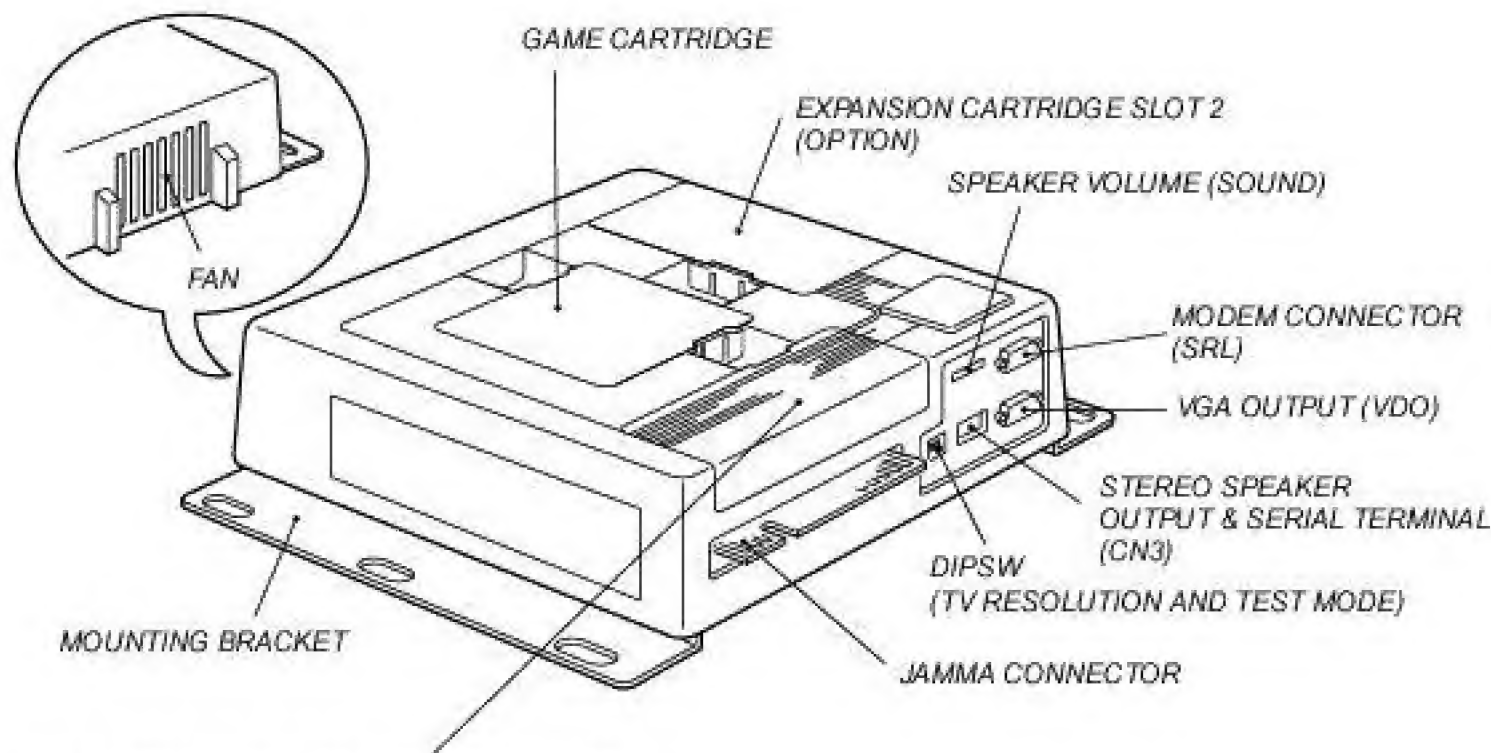

### ■ EXPANSION CARTRIDGE SLOT 1 (EX. I/O BOARD) CONNECTOR TABLE

### CN302: 28 PIN CONNECTOR

PIN#	FUNCTION	PIN#	FUNCTION
1	+5VDC	2	+5VDC
3	GND	4	GND
5	3P GUN	6	4P GUN
7	3PUP/PULX1	8	4PUP/PULX1
9	3PDQ/PULX2	10	4PDQ/PULX2
11	3PLE/PULY1	12	4PLE/PULY1
13	3PRI/PULY2	14	4PRI/PULY2
15	3P COIN	16	4P COIN
17	3P START	18	4P START
19	3PPU1/TRIG	20	4PPU1/TRIG
21	3P PUSH2	22	4P PUSH2
23	3P PUSH3	24	4P PUSH3
25	3P PUSH4	26	4P PUSH4
27	3P PUSH5	28	4P PUSH5

### CN304: 12 PIN CONNECTOR


PIN#	FUNCTION
1	+5VDC
2	+5VDC
3	GND
4	GND
5	POUT 0
6	POUT 1
7	POUT 2
8	POUT 3
9	POUT 4
10	POUT 5
11	POUT 6
12	POUT 7

### CN303: 8 PIN CONNECTOR

PIN#	FUNCTION
1	+5VDC
2	+5VDC
3	GND
4	GND
5	ANALOG 0
6	ANALOG 1
7	ANALOG 2
8	ANALOG 3




## ■ JAMMA CONNECTOR TABLE

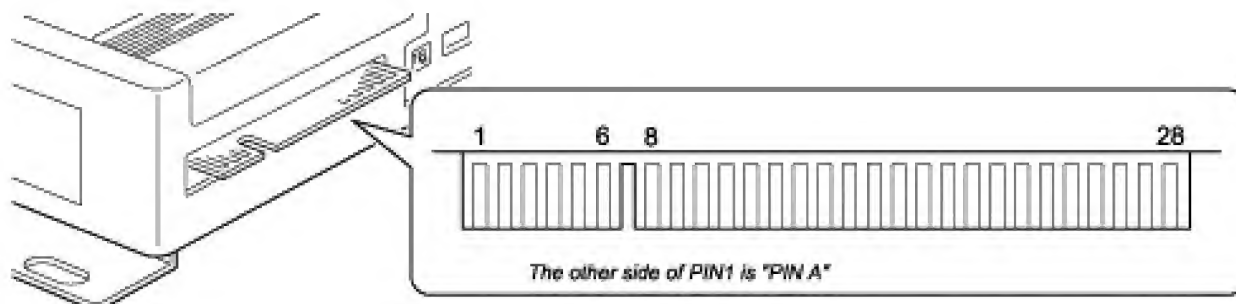

### JAMMA EDGE CONNECTOR (56 PINS)


No.	FUNCTION	I/O	No.	FUNCTION	I/O
1	GND	-	A	GND	-
2	GND	-	B	GND	-
3	+5V	IN	C	+5V	IN
4	+5V	IN	D	+5V	IN
5	N.C.	-	E	N.C.	-
6	+12V	IN	F	+12V	IN
7	N.C.	-	H	N.C.	-
8	1P COIN COUNTER	OUT	J	2P COIN COUNTER	OUT
9	1P COIN LOCKOUT	OUT	K	2P COIN LOCKOUT	OUT
10	MONO SPEAKER (+)	OUT	L	MONO SPEAKER (-)	OUT
11	AUDIO OUT	OUT	M	AUDIO GND	-
12	VIDEO RED	OUT	N	VIDEO GREEN	OUT
13	VIDEO BLUE	OUT	P	VIDEO SYNC	OUT
14	VIDEO GND	-	R	SERVICE SW	IN
15	TEST SW	IN	S	TILT SW	IN
16	1P COIN	IN	T	2P COIN	IN
17	START	IN	U	-	IN
18	SHIFT UP	IN	V	-	IN
19	SHIFT DOWN	IN	W	-	IN
20	-	IN	X	-	IN
21	-	IN	Y	-	IN
22	BOOST SW	IN	Z	-	IN
23	-	IN	a	-	IN
24	-	IN	b	-	IN
25	-	IN	c	-	IN
26	-	IN	d	-	IN
27	GND	-	e	GND	-
28	GND	-	f	GND	-

## ■ SPEAKER VOLUME (SOUND)

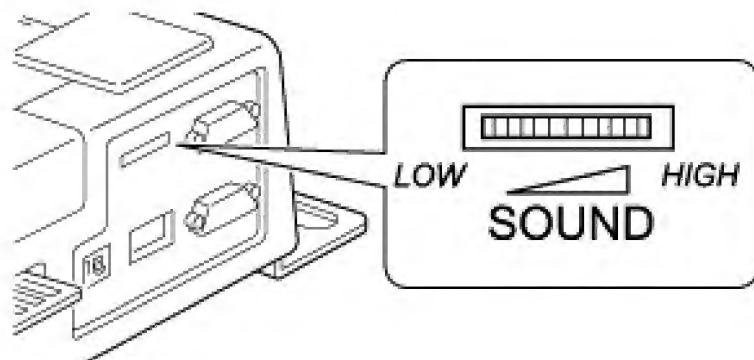

*Use for adjusting game sound*


## ■ MODEM CONNECTOR (SRL) >>> OPTION

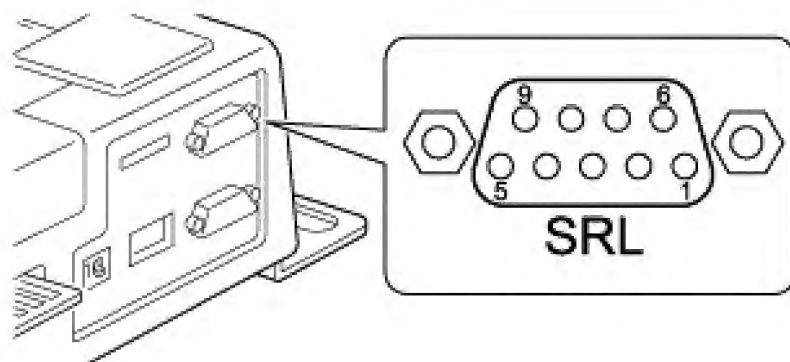

*JST 9PIN SUB, CONNECTOR (MALE)*

No.	FUNCTION	I/O
1	(N.C.)	-
2	RXD2	IN
3	TXD2	OUT
4	DTR	OUT
5	GND	-
6	(N.C.)	-
7	RTS	OUT
8	CTS	IN
9	(N.C.)	-

## ■ DIP SWITCH (2 POSITIONS)

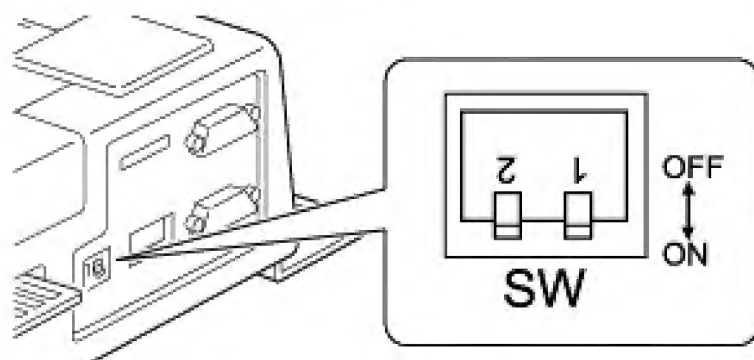

*SW-1: Change Frequency of TV signal.  
Default is OFF = 15KHz\**


*\*For Standard = Low resolution monitor*

*SW-2: Change ON position to go to  
SYSTEM MENU.*

	ON	OFF
SW-1	31KHZ	15KHZ
SW-2	SYSTEM MENU MODE	GAME MODE



## ■ STEREO SPEAKER OUTPUT CONNECTOR >>> OPTION

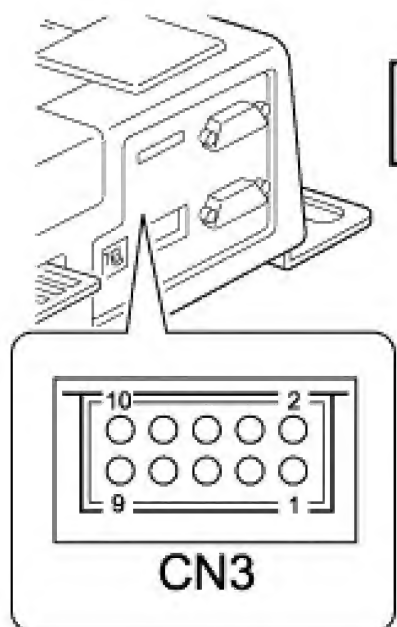


### NOTE:

Cannot use JAMMA speaker output & STEREO speaker output at same time.

STEREO SPEAKER OUTPUT & EXTENSION SERIAL CONNECTOR, PIN LAYOUT  
(JST, 10 PIN PHD CONNECTOR)

No.	FUNCTION	I/O	No.	FUNCTION	I/O
1	STEREO SPEAKER L (+)	OUT	2	TXD	OUT
3	STEREO SPEAKER L (-)	OUT	4	RXD	IN
5	STEREO SPEAKER R (+)	OUT	6	GND	-
7	STEREO SPEAKER R (-)	OUT	8	+5V	OUT
9	N.C.	-	10	N.C.	-

## ■ VGA (31KHz) TV SIGNAL OUTPUT CONNECTOR (VDO) >>> OPTION

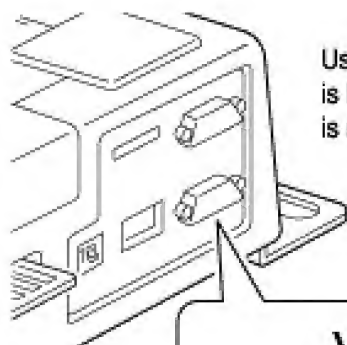

Use this connector when TV Monitor is High Resolution. Make sure DIPSW #1 is set to ON position.

VGA OUTPUT CONNECTOR, PIN LAYOUT  
(JST, 15 PIN D-SUB CONNECTOR, 3 SEQUENCE, FEMALE)

No.	FUNCTION	I/O
1	R	OUT
2	G	OUT
3	B	OUT
4	N.C.	-
5	GND	-
6	R-GND	-
7	G-GND	-
8	B-GND	-
9	+5V	OUT
10	GND	-
11	N.C.	-
12	N.C.	-
13	COMP SYNC	OUT
14	N.C.	-
15	N.C.	-

## ■ GAME CARTRIDGE


### HOW TO MOUNT GAME CARTRIDGE

*Check position of connector for both game cartridge and slot in MAIN PCB.  
Then insert Game Cartridge.  
Make sure that Game Cartridge is locked by hooks.*

### HOW TO REMOVE GAME CARTRIDGE

*Pinch both Hooks on game cartridge,  
then pull game cartridge out.*

*When you exchange Game Cartridge with  
another Game Cartridge, all backup data  
(bookkeeping data) will be cleared.  
Settings will go back to default settings.*

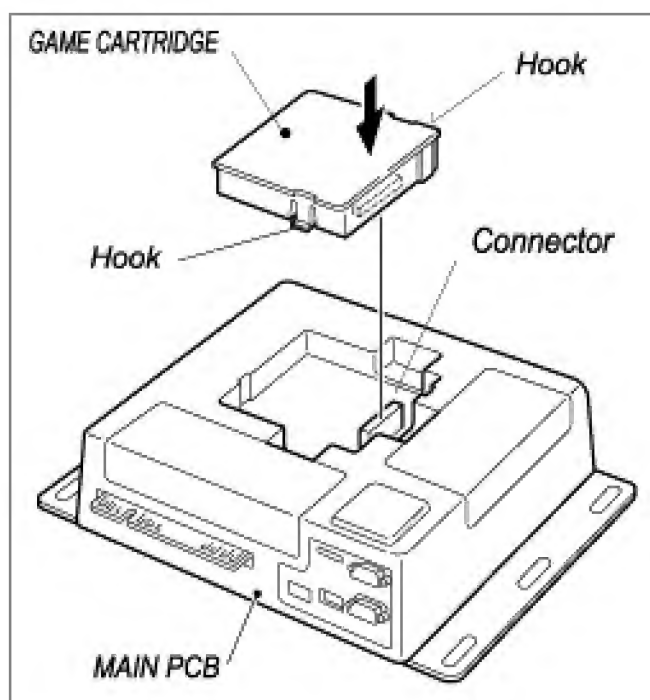




## 6. SYSTEM MENU

Press TEST switch to enter SYSTEM MENU.

(TEST switch can be activated anytime. Game play will cancel when you press a test switch during game play. Credit[s] will be lost.)

### FLOW CHART

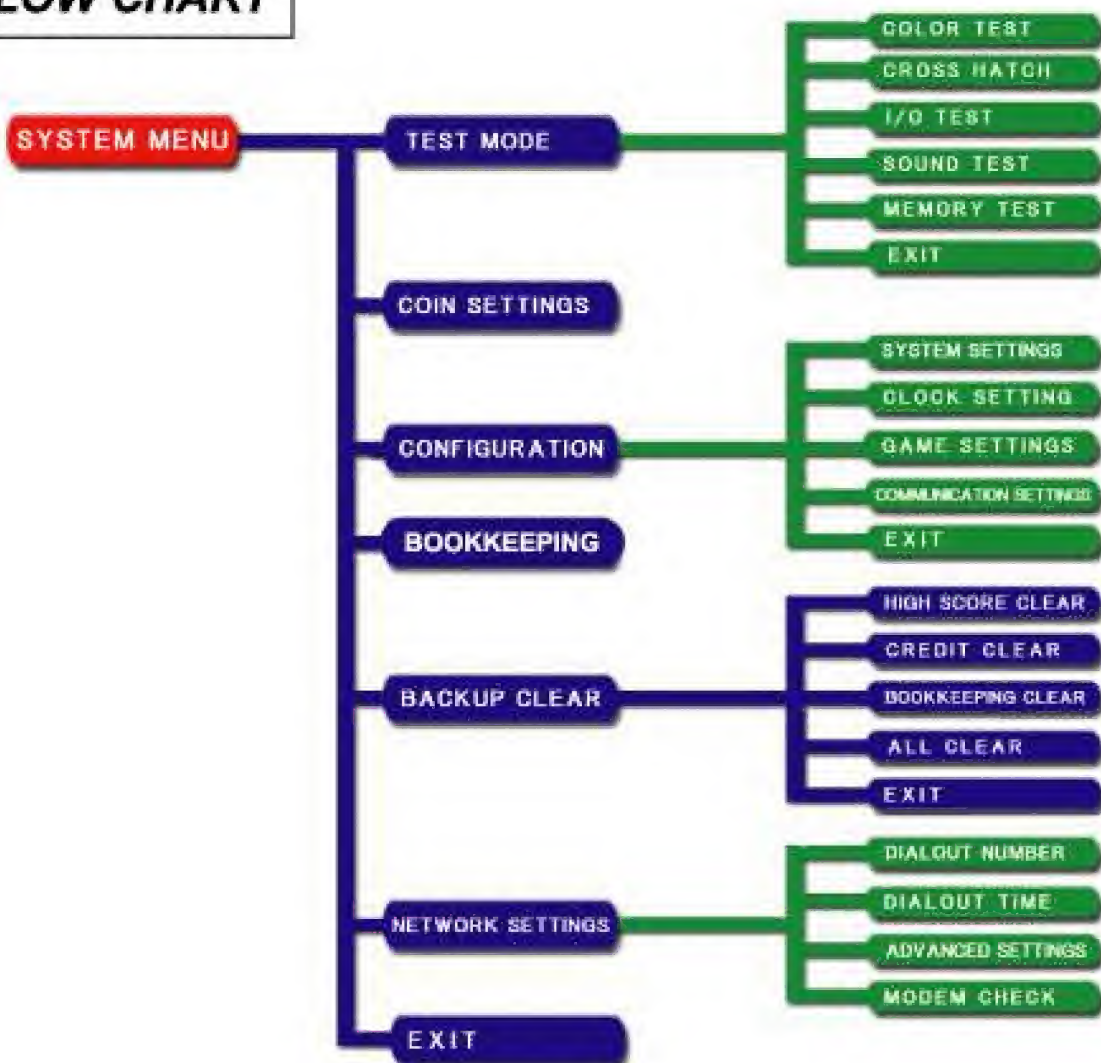

### HOW TO CONTROL

Press TEST switch to move cursor. Press SERVICE switch to select.

(If there is no TEST switch in your cabinet, change DIPSW #2 ON, re-power on to go to SYSTEM MENU. Press 1P START switch quickly to move cursor. Press & hold 1P START button to select.)

## TOP PAGE OF SYSTEM MENU

*Move cursor to contents then select to go to next menu.*

*Move cursor with TEST switch to EXIT and select to go back to normal game mode. Credit(s) are memorized.*



## TEST MODE

*Use for function test of game.*

*Select EXIT to go back to top page of SYSTEM MENU.*



## COLOR TEST

*Use for Color adjustment and checking of monitor.*


*Press SERVICE switch to go back to TEST MODE screen*



## CROSS HATCH

*Use for Size adjustment of monitor.*

*Press SERVICE switch to go back to TEST MODE screen*

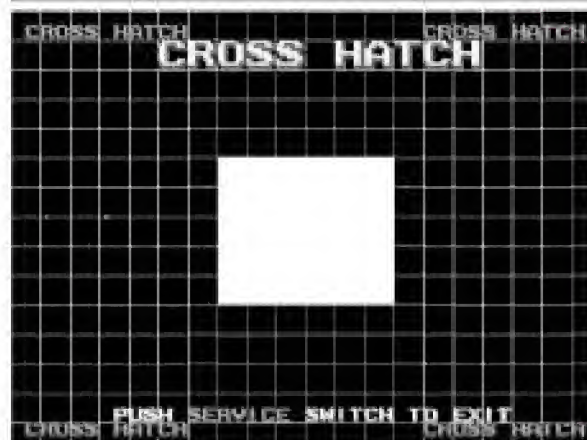




## SOUND TEST

Use for checking Speaker output.  
When MONO SPEAKER setting,  
select START to output sound.  
Select STOP to stop sound.  
Select EXIT to go back to  
TEST MODE screen

When STEREO SPEAKER setting (OPTION),  
select RIGHT to output sound from right  
speaker.  
Select LEFT to output sound from left speaker.  
Select CENTER to output sound from both left  
& right speakers.  
Select STOP to stop sound.  
Select EXIT to go back to  
TEST MODE screen

## MEMORY TEST

Use for testing RAM of MAIN PCB.  
Press TEST switch to start read  
& writing RAM test. Cannot cancel  
this test until MEMORY test is complete.  
Press SERVICE switch after  
tests completed to go back to  
TEST MODE screen

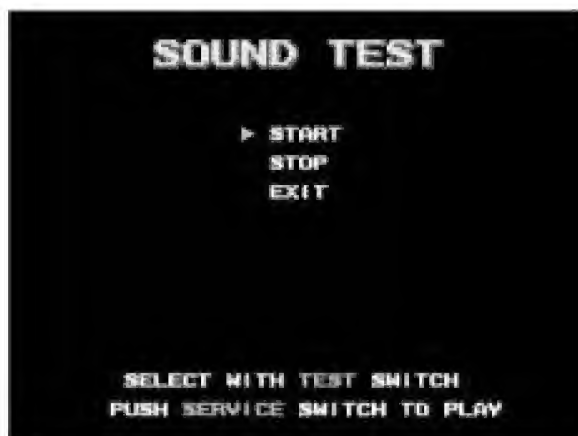

## COIN SETTING

**WARNING: ALL CREDIT DATA WILL BE LOST WHEN MAKING THE FOLLOWING CHANGES!**

### GAME MODE

Select **FREE PLAY** or **NORMAL**. Move cursor to **GAME MODE** then press **SERVICE** switch to select **NORMAL (COIN OPERATION)** or **FREE PLAY**.  
(Refer Fig.B and C)

### COIN CHUTE TYPE

Select **COMMON** or **INDIVIDUAL**. Move cursor to **COIN CHUTE TYPE** then press **SERVICE** switch to select **COMMON** or **INDIVIDUAL** mode.  
(Refer Fig.A and B)



Fig. A



Fig. B



Fig. C

### WHEN COIN CHUTE TYPE IS "COMMON"

Credit(s) will display all in one place on screen. Move cursor to coin chute A or B then press **SERVICE** switch to change setting number. You are able to set up coin chute A and B separately. Select **SAVE & EXIT** to go back to **SYSTEM MENU**.

### WHEN COIN CHUTE TYPE IS "INDIVIDUAL"

Credit(s) will display on screen by players. Move cursor to coin chute A or B then press **SERVICE** switch to change setting number. You are unable to set up coin chute A and B separately. Coin chute A & B must be same setting. Select **SAVE & EXIT** to go back to **SYSTEM MENU**.

 
## PRESET SITUATION

There is 53 kinds of coin settings.  
When PRESET SITUATION is NORMAL,  
you can select from 14 kinds. (#00 to #09 and  
#45 to #48.) This is basic coin settings line-up.  
When PRESET SITUATION is ADVANCE,  
you can choose from all 53 kinds as shown  
below.

NO	COIN SETTING
#00	1 COIN 1 CREDIT / 1 COIN CONTINUE
#01	2 COINS 1 CREDIT / 1 COIN CONTINUE
#02	2 COINS 1 CREDIT / 2 COINS CONTINUE
#03	3 COINS 1 CREDIT / 1 COIN CONTINUE
#04	3 COINS 1 CREDIT / 2 COINS CONTINUE
#05	3 COINS 1 CREDIT / 3 COINS CONTINUE
#06	4 COINS 1 CREDIT / 1 COIN CONTINUE
#07	4 COINS 1 CREDIT / 2 COINS CONTINUE
#08	4 COINS 1 CREDIT / 3 COINS CONTINUE
#09	4 COINS 1 CREDIT / 4 COINS CONTINUE
#10	5 COINS 1 CREDIT / 1 COIN CONTINUE
#11	5 COINS 1 CREDIT / 2 COINS CONTINUE
#12	5 COINS 1 CREDIT / 3 COINS CONTINUE
#13	5 COINS 1 CREDIT / 4 COINS CONTINUE
#14	5 COINS 1 CREDIT / 5 COINS CONTINUE
#15	6 COINS 1 CREDIT / 1 COIN CONTINUE
#16	6 COINS 1 CREDIT / 2 COINS CONTINUE
#17	6 COINS 1 CREDIT / 3 COINS CONTINUE
#18	6 COINS 1 CREDIT / 4 COINS CONTINUE
#19	6 COINS 1 CREDIT / 5 COINS CONTINUE
#20	6 COINS 1 CREDIT / 6 COINS CONTINUE
#21	7 COINS 1 CREDIT / 1 COIN CONTINUE
#22	7 COINS 1 CREDIT / 2 COINS CONTINUE
#23	7 COINS 1 CREDIT / 3 COINS CONTINUE
#24	7 COINS 1 CREDIT / 4 COINS CONTINUE
#25	7 COINS 1 CREDIT / 5 COINS CONTINUE
#26	7 COINS 1 CREDIT / 6 COINS CONTINUE
#27	7 COINS 1 CREDIT / 7 COINS CONTINUE



NO	COIN SETTING
#28	8 COINS 1 CREDIT / 1 COIN CONTINUE
#29	8 COINS 1 CREDIT / 2 COINS CONTINUE
#30	8 COINS 1 CREDIT / 3 COINS CONTINUE
#31	8 COINS 1 CREDIT / 4 COINS CONTINUE
#32	8 COINS 1 CREDIT / 5 COINS CONTINUE
#33	8 COINS 1 CREDIT / 6 COINS CONTINUE
#34	8 COINS 1 CREDIT / 7 COINS CONTINUE
#35	8 COINS 1 CREDIT / 8 COINS CONTINUE
#36	9 COINS 1 CREDIT / 1 COIN CONTINUE
#37	9 COINS 1 CREDIT / 2 COINS CONTINUE
#38	9 COINS 1 CREDIT / 3 COINS CONTINUE
#39	9 COINS 1 CREDIT / 4 COINS CONTINUE
#40	9 COINS 1 CREDIT / 5 COINS CONTINUE
#41	9 COINS 1 CREDIT / 6 COINS CONTINUE
#42	9 COINS 1 CREDIT / 7 COINS CONTINUE
#43	9 COINS 1 CREDIT / 8 COINS CONTINUE
#44	9 COINS 1 CREDIT / 9 COINS CONTINUE
#45	1 COIN 2 CREDITS
#46	1 COIN 3 CREDITS
#47	1 COIN 4 CREDITS
#48	1 COIN 5 CREDITS
#49	1 COIN 6 CREDITS
#50	1 COIN 7 CREDITS
#51	1 COIN 8 CREDITS
#52	1 COIN 9 CREDITS



>>> This color = NORMAL 14 kinds.



## CONFIGURATION

4 kinds of contents.

Contents of COMMUNICATION is unavailable when game has no COMMUNICATION feature.

### SYSTEM SETTINGS

**AREA:** Select country of operation.  
(JAPAN, NORTH AMERICA, EUROPE or OTHER)  
This setting effects factory defaults.

**LANGUAGE:** Select from following:  
(English or Japanese)

**ADVERTISE SOUND:**  
Select to output sound in attract mode.

**AUDIO MODE:**  
Select sound STEREO (OPTION) or MONO.

**SOUND VOLUME:**  
Volume level of sound. Default is "15"

### CLOCK SETTING

Adjust clock system on Main PCB.  
Move cursor then press SERVICE switch to advance each digit. Press & hold SERVICE switch more than 1 sec. to speed it up.

Move cursor to SAVE & EXIT then press SERVICE switch to go back to SYSTEM MENU screen.



### GAME SETTING

Adjust game setting at this mode. (Refer detail on Page 9)  
Move cursor to SAVE & EXIT then press SERVICE switch to go back to CONFIGURATION.  
Select RETURN TO FACTORY SETTINGS to change all settings to Factory default settings.

# BOOKKEEPING

5 kinds. Refer below.

## SUMMARY

SRAM on Main PCB records & saves following data.

**TOTAL TIME:** This is the time when game is powered on.

**TOTAL PLAYTIME:** Play Time.

**COIN #A:** Total coins of COIN CHUTE 1.

**COIN #B:** Total coins of COIN CHUTE 2.

**COIN #C:** Total coins of COIN CHUTE 3.

**COIN #D:** Total coins of COIN CHUTE 4.

**TOTAL COIN:** Total coins of COIN #A, B, C, and D.

**COIN CREDIT:** Number of credits by coins in.

**SERVICE CREDIT:** Number of SERVICE credits.

**TOTAL CREDIT:** Total of COINS + SERVICE CREDITS.

**NORMAL START:** Number of games started from beginning.

**CONTINUE START:** Number of games started from beginning.

**NETWORK START 1:** Number of NETWORK plays on Cabinet 1.

**NETWORK START 2:** Number of NETWORK plays on Cabinet 2.

**NETWORK START 3:** Number of NETWORK plays on Cabinet 3.

**NETWORK START 4:** Number of NETWORK plays on Cabinet 4.



## DAILY PLAY DATA1

Display Average play time fifor each play by Day.

DAILY PLAY DATA1					
DATE		PLAY	CONT	AVE PLAY TIME	
25/10/93 FRI		0	0	0h	0m 0s
PUSH SERVICE SWITCH TO EXIT					

## MONTHLY PLAY DATA1

Display Average play time for each play by Month.

MONTHLY PLAY DATA1					
DATE	PLAY	CONT	AVE PLAY TIME		
Oct - 93	0	0	0h	0m	0s
TOTAL	0	0	0h	0m	0s
PUSH SERVICE SWITCH TO EXIT					

## DAILY COIN DATA1

Display number of coins for each play by Day.

DAILY COIN DATA1						
DATE	Co#A	Co#B	Co#C	Co#D	SRV	
25/10/93 FRI	0	0	0	0	0	0
PUSH SERVICE SWITCH TO EXIT						

## MONTHLY COIN DATA1

Display number of coins for each play by Month.

MONTHLY COIN DATA1						
MONTH	Co#A	Co#B	Co#C	Co#D	SRV	
Oct -93	0	0	0	0	0	0
TOTAL	0	0	0	0	0	0
PUSH SERVICE SWITCH TO EXIT						

## **BACKUP CLEAR**

*Clear following data in MAIN PCB.  
(HIGH SCORE, CREDIT CLEAR,  
BOOKKEEPING CLEAR and ALL CLEAR)*

*Press SERVICE to select each contents then  
go to each data clear screen.*

*In each data clear screen, Press TEST switch  
to move cursor to "YES" then press  
SERVICE switch. After finishing data clear,  
screen will go back to BACKUP CLEAR screen.*

### **BACKUP CLEAR**

▶ HIGH SCORE CLEAR  
CREDIT CLEAR  
BOOKKEEPING CLEAR  
ALL CLEAR  
EXIT

SELECT WITH TEST SWITCH  
PUSH SERVICE SWITCH TO ENTER



## 7. LINK (OPTION) & SETTINGS

*FASTER THAN SPEED* needs a LAN CABLE & ROUTER to LINK 2 games. (OPTION)



**SUGGESTED ROUTER**  
Maker: LINKSYS  
Model: BEFSR41



**Power Adaptor**  
(Included w/ ROUTER)



**LAN (Ethernet) Cable (2)**  
\* One LAN cable included  
in ROUTER kit.  
You will need to purchase  
only one LAN cable.



**AC Tap**  
Maker: Cooper

### HOW TO CONNECT

- 1) (UR game) Open control panel and Instruction bracket to locate Main PCB. (Sit-down game) Open back door to locate Main PCB.
- 2) Connect 2 LAN cable connectors to LAN cartridge on both Main PCBs. (See Below)
- 3) Connect the other ends of LAN cable connectors to ROUTER. (Refer below picture for connection)
- 4) Remove 120VAC (For DBA) plug from outlet of Power Supply box and connect AC Tap. Then re-plug 120VAC (For DBA) plug back to AC Tap and plug Power Adaptor of ROUTER to AC Tap.
- 5) Use drill to make hole for cable in both back doors then mount ROUTER to one of the cabinets inside. (You may need wood screws and wire tights)
- 6) (UR game) Close Instruction bracket and Control panel. (Sit-down game) Close Back door.
- 7) Refer to next page to set up communication setting.

#### BACK VIEW OF ROUTER



**DO NOT CONNECT  
HERE. (NOT USED)**

Connect 2 LAN Cable  
connectors to 2 ports  
out of 4



View, inside of cabinet (Sit-down)



Connect LAN cable to LAN  
(Communication) cartridge  
on Main PCB, AW



Mounting view, ROUTER (Sit-down)

### COMMUNICATION ERROR

Left top on screen shows error code "ERROR LINKING PROBLEM" in red letters. Please check as below.

- 1) LAN Cable connections.
- 2) Power on ROUTER unit.
- 3) LAN Cartridge mounting on Main PCB.
- 4) Check communication setting of both cabinets. (Refer next page)

After checking above, reset both machines.



# COMMUNICATION SETTING

Set up LINK play in this mode. Go to "CONFIGURATION" then select "COMMUNICATION SETTING." Do the following:

## LINK MODE

2 kinds of settings. ("ON" or "OFF") "ON" for "LINK PLAY". Default is "OFF."



## LINK ID

2 kinds of settings. ("MASTER" or "SLAVE") One side must be "MASTER" and other side must be "SLAVE."



## How to test:

Screen shows result of test. If any errors, refer below.  
"EXIT" to return to CONFIGURATION screen.

### DIAGNOSTIC RESULT

**OK >>>** No problem. Both cabinets are linked.

#### HARDWARE CONDITION NG

Check Link cable and other device (Router, LAN Cartridge and Main PCB) connections.

#### SETTING CONDITION NG


Both cabinets are set as "MASTER". Change "LINK ID" setting for one cabinet to "SLAVE."  
Both cabinets are set as "SLAVE". Change "LINK ID" setting for one cabinet to "MASTER."

### NOTE:


During LINK mode (2 games linked), please set up both games to same GAME SETTINGS except COMMUNICATION CLASS.



## BENCH SEAT ASSY INSTALLATION

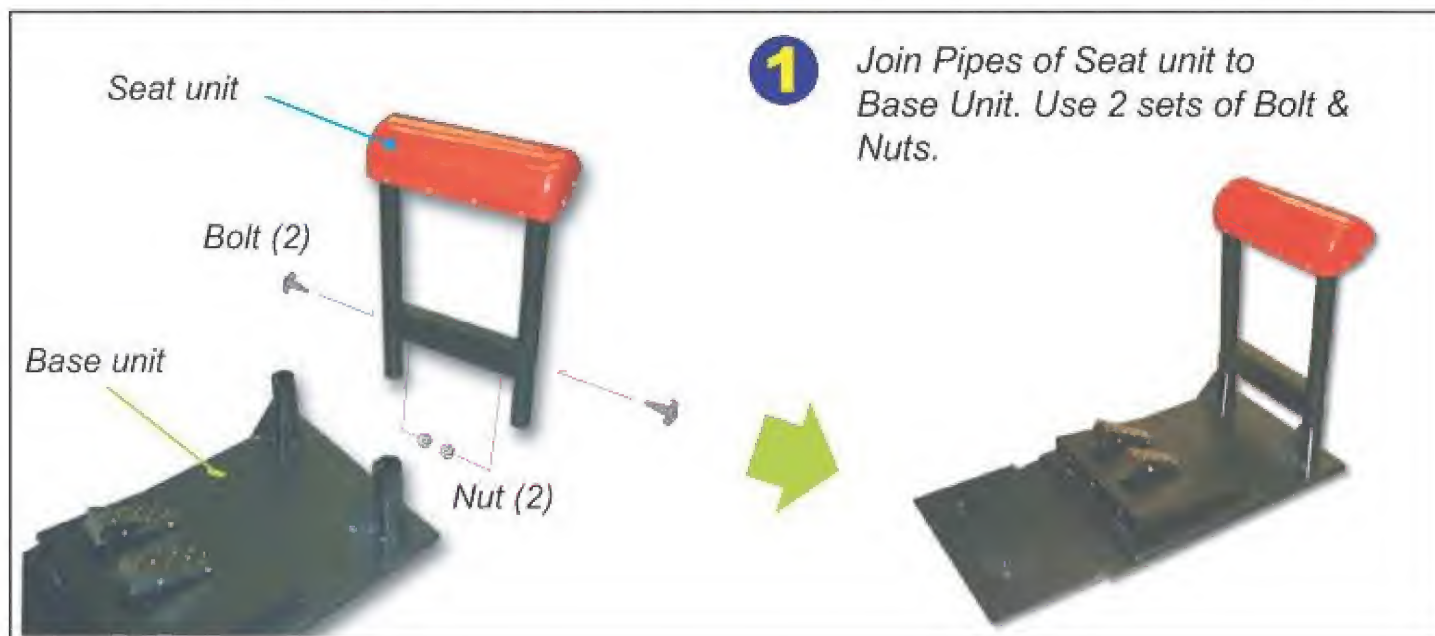

- 2** Place Main cabinet to SEAT ASSY as indicated.  
The 2 Stud bolts on base fit in bolt holes on bottom of cabinet base wood. Open back door of cabinet then use plain washers & Nuts to secure together.

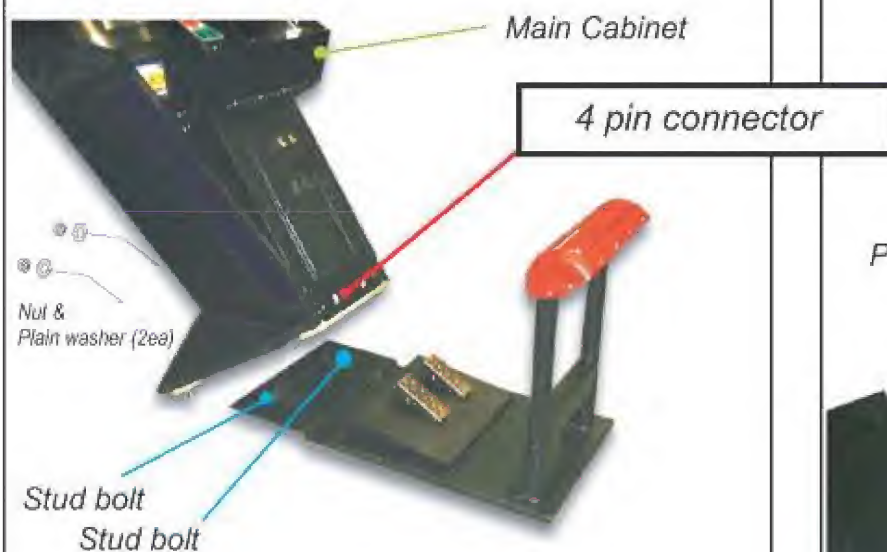


- 3** Remove 3 screws from Left & Right to open Pedal base. Connect Pedal Harness connector to **4 pin connector** located at bottom of Main cabinet. Close Pedal base.





### STEERING CONTROL PANEL INSTALLATION

- 1** Use Key to Open Steering Control panel Assy. Use 6 screws to mount it. Then Use 4 screws to mount Support Bracket under control panel.

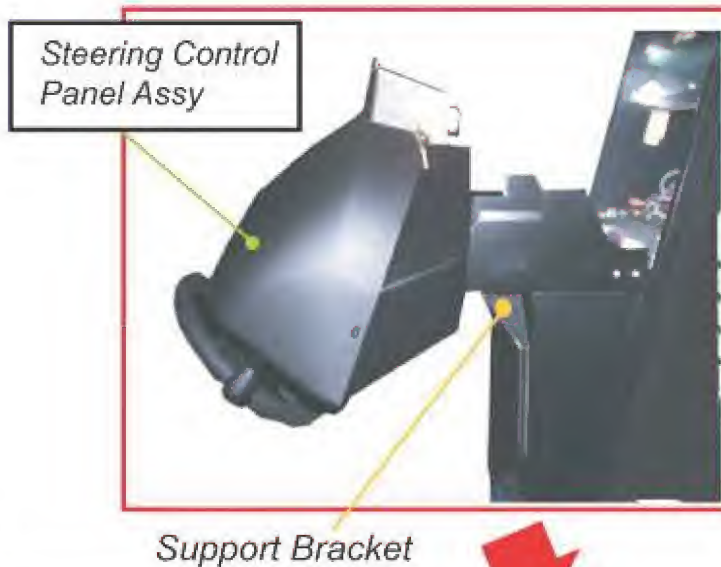


**Side view**  
**when control panel is mounted.**



- 2** Connect driving harness connectors as below. Close Control panel with locks after connecting all connectors.

Motor  
connector

5K pot  
connector

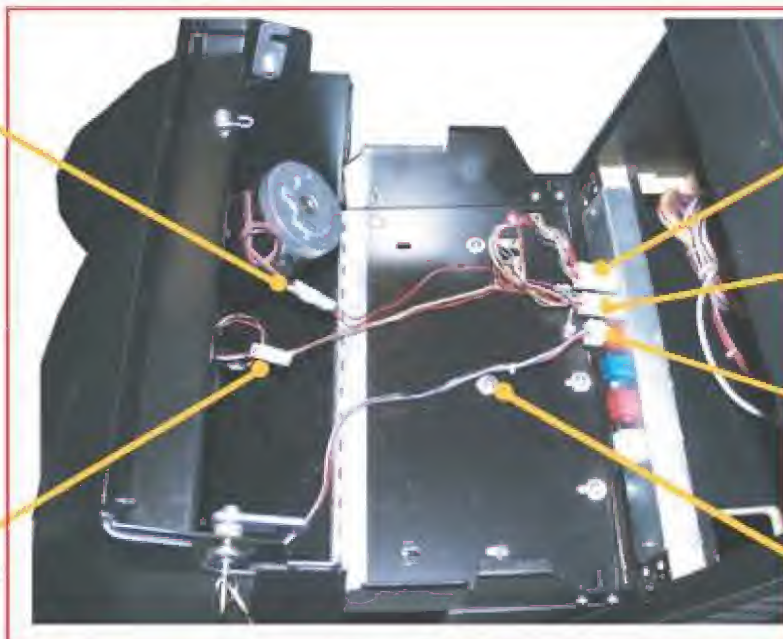

N connector  
(12 pins)

M Connector  
(9 pins)

1P connector  
(12 pins)

Screws & Washers  
for mounting (6 sets)

## **WARRANTY**

### *Limited warranty, Repair and Return Policy*

*Sammy USA Corporation warrants all products to be free from defective materials and workmanship for a period of thirty (30) days from the Sammy USA Corporation invoice date unless otherwise specified in writing by Sammy USA Corporation. The extent of this warranty applies to all electronic assemblies only, and does not include lamps and fuses.*

*This limited warranty is invalid for any product that upon examination, is deemed to have been subject to misuse, improper repair or installation, neglect or violation of specification or other instructions published by Sammy USA Corporation.*

*There are no additional warranties described above.*

*The limited warranties described above shall be in lieu of any other warranty, express or implied, including but not limited to any implied warranty of merchantability or fitness for a particular purpose.*

### *Return Merchandise Authorization*

- 1. Contact your authorized Sammy USA distributor to receive a Return Merchandise Authorization for return.*
- 2. You must obtain RMA numbers from Sammy USA Corporation through an authorized Sammy USA distributor. Please have your serial number available when calling for RMA number.*
- 3. All items must have an RMA number marked clearly on the outside of the package.*
- 4. Products must be shipped prepaid. Products returned without an RMA number will not be accepted.*
- 5. Credits to accounts are subject to inspection of products for damage and suitability for resale.*







